



 
# **Roxtec GH FL100 transit**

Transit with wide flange, for bolting onto uneven structures.

The Roxtec GH FL100 is a cable and pipe seal that allows for high packing density. The transit ensures a tight seal when bolted onto concrete or brick walls/floors. The rectangular steel frame has a 100mm wide flange to make it possible to place the bolting holes further from the opening in the wall to avoid the risk of cracks. The transit can be used with a GE extension frame in galvanized steel to cover the depth of a thick







Area efficient

Easy to maintain and inspect

#### **Product characteristics**





IP/UL NEMA

#### Structure of installation





Mounting type



Brick

## **Ratings & certificates**

Fire

F/T rating according to UL 1479

#### **Tightness**



IP 66/67

### Frame dimensions

E/EI rating according to EN 13501

The frame variants below are a limited selection. For the full range of frames and configurations, please visit roxtec.com.

Product	Frame openings	Packing space	External dimensions WxHxD	Aperture dimensions w x h	Weight	Art. no
GH 6x1 FL100 GALV	1	120 x 180	332.5 x 430 x 60	148(+5/-5) x 245(+5/-5)	7.8	122158
GH 6x2 FL100 GALV	2	120 x 180	463 x 430 x 60	278(+5/-5) x 245(+5/-5)	11	122159
GH 6x3 FL100 GALV	3	120 x 180	593.5 x 430 x 60	409(+5/-5) x 245(+5/-5)	13.8	122160
GH 6x1 FL100 AISI316	1	120 x 180	332.5 x 430 x 60	148(+5/-5) × 245(+5/-5)	7.4	105508
GH 6x2 FL100 AISI316	2	120 x 180	463 x 430 x 60	278(+5/-5) x 245(+5/-5)	10.5	120984
GH 6x3 FL100 AISI316	3	120 x 180	593.5 x 430 x 60	409(+5/-5) x 245(+5/-5)	13	105509

2024-05-01



**Accessories** 





### **Sealing components**

### **Sealing components**



Lubricant





RM module with

Multidiameter™

Wedge & Wedgekit



RM solid compensation

module



Stayplate

GE extension frame

Holder tools



Sealing kit

For detailed information, please visit roxtec.com.

The product information provided by Roxtec does not release the purchaser of the Roxtec system, or part thereof, from the obligation to independently determine the suitability of the products for the intended process, installation and/or use.

the intended process, installation and/or use.
Roxtec gives no guarantee for the Roxtec system or any part thereof and assumes no liability for any loss or damage whatsoever, whether direct, indirect, consequential, loss of profit or otherwise, occurred or caused by the Roxtec systems or installations containing components not manufactured by an authorized manufacturer and/or occurred or caused by the use of the Roxtec system in a manner or for an application other than for which the Roxtec system was designed or intended.
Roxtec expressly excludes any implied warranties of merchantability and fitness for a particular purpose and all other express or implied representations and warranties provided by statute or common law. User determines suitability of the Roxtec system for intended use and assumes all risk and liability in connection therewith. In no event shall Roxtec be liable for indirect,

consequential, punitive, special, exemplary or incidental damages or losses.

The Roxtec products are offered and sold in accordance with the conditions of the Roxtec General Terms of Sales. The latest version of the Roxtec General Terms of Sales can be downloaded from https://www.roxtec.com/en/about-us/about-roxtec/general-terms-of-sales/

We reserve the right to make changes to the product and technical information without further notice. Any errors in print or entry are no claims for indemnity. The content of this publication is the property of Roxtec International AB and is protected by copyright.

This document was generated on: 2024-05-01

2/2 2024-05-01