



# **Roxtec S transit**

Transit for welding to the structure.

The Roxtec S is a multi-cable and pipe transit available in different materials and with a single or various combinations of openings. The transit frame is produced in 10mm thick metal and is attached to the structure by welding. The sealing modules are adaptable to cables and pipes of different sizes, and can be used to build in spare capacity in the transit.





- Easy to maintain and inspect
- Provides built-in spare capacity

#### **Product characteristics**







Structure of installation

Mounting type







Welding

# **Ratings & certificates**

#### Fire


- A-CLASS according to IMO 2010 FTP Code
- E/EI rating according to EN 45545 E60
- H-CLASS according to IMO 2010 FTP Code + HC fire load curve
- Jet fire according to ISO 22899-1 and OTI 95634

### **Tightness**

- Gas: 2.67 bar (catastrophic)
- Water: 4 bar (catastrophic)

### Frame dimensions

The frame variants below are a limited selection. For the full range of frames and configurations, please visit roxtec.com.

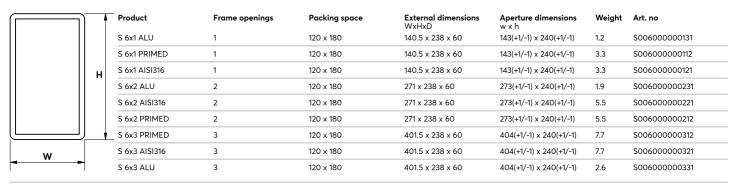

2024-04-27








## **Sealing components**
 
### **Sealing components**













**Accessories** 



Lubricant

RM module with Multidiameter™

Wedge & Wedgekit

RM solid compensation module

Stayplate

Holder tools

Welding tools



Sealing kit

For detailed information, please visit roxtec.com.

The product information provided by Roxtec does not release the purchaser of the Roxtec system, or part thereof, from the obligation to independently determine the suitability of the products for the intended process, installation and/or use.

the intended process, installation and/or use.
Roxtec gives no guarantee for the Roxtec system or any part thereof and assumes no liability for any loss or damage whatsoever, whether direct, indirect, consequential, loss of profit or otherwise, occurred or caused by the Roxtec systems or installations containing components not manufactured by an authorized manufacturer and/or occurred or caused by the use of the Roxtec system in a manner or for an application other than for which the Roxtec system was designed or intended.
Roxtec expressly excludes any implied warranties of merchantability and fitness for a particular purpose and all other express or implied representations and warranties provided by statute or common law. User determines suitability of the Roxtec system for intended use and assumes all risk and liability in connection therewith. In no event shall Roxtec be liable for indirect,

consequential, punitive, special, exemplary or incidental damages or losses.

The Roxtec products are offered and sold in accordance with the conditions of the Roxtec General Terms of Sales. The latest version of the Roxtec General Terms of Sales can be downloaded from https://www.roxtec.com/en/about-us/about-roxtec/general-terms-of-sales/

We reserve the right to make changes to the product and technical information without further notice. Any errors in print or entry are no claims for indemnity. The content of this publication is the property of Roxtec International AB and is protected by copyright. This document was generated on: 2024-04-27

2/2 2024-04-27