




# Roxtec Sleeve-it™ transition collar

Fire protection collar for connections between steel and plastic pipes.

The Roxtec Sleeve-it™ Transition collar ensures non-weld fire protection for connections between steel and plastic pipes of different sizes. The stainless steel casing wraps easily around the joint between the pipes and contains intumescent material that reacts with the heat to protect the transition in case of fire. The collar is used in non-pressurized systems in both new-build and retrofit projects.

- Light-weight
- Perfect for retrofit
- Quick and easy to install

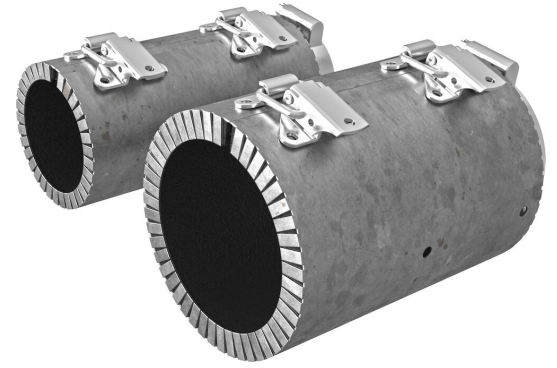

## Product characteristics



Fire rated

## Structure of installation



Metal

## Mounting type



Bolting

## Ratings & certificates

### Fire

- A-CLASS according to IMO 2010 FTP Code
- B-CLASS according to IMO 2010 FTP Code

## Sealing components

### Sealing components



Sleeve-it™ Transition collar

For detailed information, please visit [roxtec.com](https://www.roxtec.com).



# Pre-configured transit kits

mm/kg



SLEEVE-IT  
TR-MAR50/50



SLEEVE-IT TR-MAR75/75



SLEEVE-IT  
TR-MAR50/60 (2")



SLEEVE-IT TR-MAR75/90  
(3")



SLEEVE-IT  
TR-MAR90/90

Product	Configuration	Aperture dimensions ∅	Weight	Art. no
SLEEVE-IT TR-MAR50/50		0 - 0	0.44	106289
SLEEVE-IT TR-MAR75/75		0 - 0	0.7	106298
SLEEVE-IT TR-MAR50/60 (2")		0 - 0	0.5	106304
SLEEVE-IT TR-MAR75/90 (3")		0 - 0	0.7	106307
SLEEVE-IT TR-MAR90/90		0 - 0	0.7	106310

The product information provided by Roxtec does not release the purchaser of the Roxtec system, or part thereof, from the obligation to independently determine the suitability of the products for the intended process, installation and/or use.

Roxtec gives no guarantee for the Roxtec system or any part thereof and assumes no liability for any loss or damage whatsoever, whether direct, indirect, consequential, loss of profit or otherwise, occurred or caused by the Roxtec systems or installations containing components not manufactured by an authorized manufacturer and/or occurred or caused by the use of the Roxtec system in a manner or for an application other than for which the Roxtec system was designed or intended.

Roxtec expressly excludes any implied warranties of merchantability and fitness for a particular purpose and all other express or implied representations and warranties provided by statute or common law. User determines suitability of the Roxtec system for intended use and assumes all risk and liability in connection therewith. In no event shall Roxtec be liable for indirect, consequential, punitive, special, exemplary or incidental damages or losses.

The Roxtec products are offered and sold in accordance with the conditions of the Roxtec General Terms of Sales. The latest version of the Roxtec General Terms of Sales can be downloaded from <https://www.roxtec.com/en/about-us/about-roxtec/general-terms-of-sales/>

We reserve the right to make changes to the product and technical information without further notice. Any errors in print or entry are no claims for indemnity. The content of this publication is the property of Roxtec International AB and is protected by copyright.

This document was generated on: 2024-04-05