


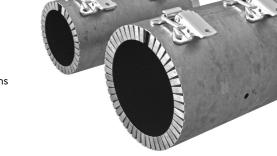

Roxtec Sleev-it™ transition collar

Fire protection collar for connections between steel and plastic pipes.

The Roxtec Sleev-it™ Transition collar ensures non-weld fire protection for connections between steel and plastic pipes of different sizes. The stainless steel casing wraps easily around the joint between the pipes and contains intumescent material that reacts with the heat to protect the transition in case of fire. The collar is used in non-pressurized systems in both new-build and retrofit projects.



Light-weight

Perfect for retrofit

Quick and easy to install

Product characteristics



Fire rated

Structure of installation



 $\overline{}$

(6/

Mounting type

Bolting

Ratings & certificates

Fire

- A-CLASS according to IMO 2010 FTP Code
- B-CLASS according to IMO 2010 FTP Code

Sealing components

Sealing components



Sleev-it™ Transition collar

For detailed information, please visit roxtec.com.

/2 2025-07-05



https://www.roxtec.com/linktransit/en-nz/solution/1573



Pre-configured transit kits

mm/kg











SLEEV-IT TR-MAR50/50

SLEEV-IT TR-MAR50/60 (2")

SLEEV-IT TR-MAR75/75

SLEEV-IT TR-MAR75/90 (3")

SLEEV-IT TR-MAR90/90

Product	Configuration	Aperture dimensions \varnothing	Weight Art. no
SLEEV-IT TR-MAR50/50	1x (50.0-50.0)	0 - 0	0.44 106289
SLEEV-IT TR-MAR50/60 (2")	1x (50.0-60.0)	0 - 0	0.5 106304
SLEEV-IT TR-MAR75/75	1x (75.0-75.0)	0 - 0	0.7 106298
SLEEV-IT TR-MAR75/90 (3")	1x (75.0-90.0)	0 - 0	0.7 106307
SLEEV-IT TR-MAR90/90	1x (90.0-90.0)	0 - 0	0.7 106310

The product information provided by Roxtec does not release the purchaser of the Roxtec system, or part thereof, from the obligation to independently determine the suitability of the products for

The product information provided by Roxtec does not release the purchaser of the Roxtec system, or part thereof, from the obligation to independently determine the suitability of the products for the intended process, installation and/or use.

Roxtec gives no guarantee for the Roxtec system or any part thereof and assumes no liability for any loss or damage whatsoever, whether direct, indirect, consequential, loss of profit or otherwise, occurred or caused by the Roxtec systems or installations containing components not manufactured by an authorized manufacturer and/or occurred or caused by the use of the Roxtec system in a manner or for an application other than for which the Roxtec system was designed or intended.

Roxtec expressly excludes any implied warranties of merchantability and fitness for a particular purpose and all other express or implied representations and warranties provided by statute or common law. User determines suitability of the Roxtec system for intended use and assumes all risk and liability in connection therewith. In no event shall Roxtec be liable for indirect, consequential, punitive, special, exemplary or incidental damages or losses.

The Roxtec products are offered and sold in accordance with the conditions of the Roxtec General Terms of Sales can be downloaded from the total conditions of the Roxtec General Terms of Sales can be downloaded from the total conditions.

https://www.roxtec.com/en/about-us/about-roxtec/general-terms-of-sales/
We reserve the right to make changes to the product and technical information without further notice. Any errors in print or entry are no claims for indemnity. The content of this publication is the property of Roxtec International AB and is protected by copyright.

This document was generated on: 2025-07-05