


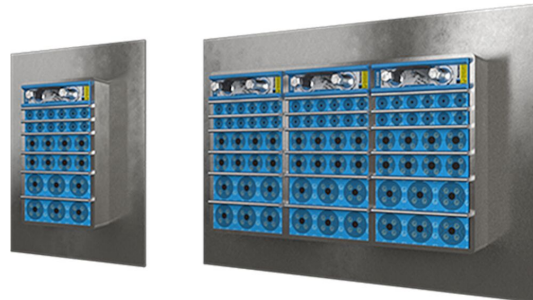

# Prostup Roxtec SF Ex k přivaření

Prostup s přírubou s certifikací Ex k přivaření ke konstrukci.

Rám Roxtec G Ex určený pro přivaření je prosup s vysokou kabelovou hustotou pro oblasti Ex e a Ex tb v teplotách od -60 do +80 °C. Rám je určen pro přivaření.



## Vlastnosti výrobku



IP/UL NEMA



Certifikace Ex

## Struktura instalace



Kov

## Typ montáže



Přivaření

## Specifikace a certifikáty

### Těsnost

IP 66/67

### Podporuje

Certifikace Ex

## Rozměry rámu

mm/kg

Níže uvedené verze rámu jsou pouze některé možnosti. Úplnou nabídku rámu a konfigurací najdete na stránkách [roxtec.com](https://www.roxtec.com).

	Název	Otvory rámu	Prostor utěsnění	Vnější rozměry WxHxD	Rozměry otvoru w x h	Hmotnost	Typ. č.
	G 6x1 W Ex PRIMED	1	120 x 180	252.5 x 350 x 60	201(+15/-15) x 298(+15/-15)	4.8	159116
	G 6x2 W Ex PRIMED	2	120 x 180	383 x 350 x 60	331(+15/-15) x 298(+15/-15)	7.5	163091
	G 6x3 W Ex PRIMED	3	120 x 180	513.5 x 350 x 60	462(+15/-15) x 298(+15/-15)	3	163092
	G 6x1 W Ex AISI316	1	120 x 180	252.5 x 350 x 60	201(+15/-15) x 298(+15/-15)	4.8	125163
	G 6x2 W Ex AISI316	2	120 x 180	383 x 350 x 60	331(+15/-15) x 298(+15/-15)	7.3	105258
	G 6x3 W Ex AISI316	3	120 x 180	513.5 x 350 x 60	462(+15/-15) x 298(+15/-15)	9.9	109887



# Údaje o izolačních komponentách

## Těsnící komponenty



Mazivo Roxtec



Klínové těsnění a souprava klínových těsnění Ex



Modul RM Ex s technologií Multidiameter™



Plný kompenzační modul RM Ex



Vymezovací destička Ex



Svařovací nástroje Roxtec

## Příslušenství



Souprava těsnění Ex

Podrobné informace najdete na stránkách [www.roxtec.com](https://www.roxtec.com).

The product information provided by Roxtec does not release the purchaser of the Roxtec system, or part thereof, from the obligation to independently determine the suitability of the products for the intended process, installation and/or use.

Roxtec gives no guarantee for the Roxtec system or any part thereof and assumes no liability for any loss or damage whatsoever, whether direct, indirect, consequential, loss of profit or otherwise, occurred or caused by the Roxtec systems or installations containing components not manufactured by an authorized manufacturer and/or occurred or caused by the use of the Roxtec system in a manner or for an application other than for which the Roxtec system was designed or intended.

Roxtec expressly excludes any implied warranties of merchantability and fitness for a particular purpose and all other express or implied representations and warranties provided by statute or common law. User determines suitability of the Roxtec system for intended use and assumes all risk and liability in connection therewith. In no event shall Roxtec be liable for indirect, consequential, punitive, special, exemplary or incidental damages or losses.

The Roxtec products are offered and sold in accordance with the conditions of the Roxtec General Terms of Sales. The latest version of the Roxtec General Terms of Sales can be downloaded from <https://www.roxtec.com/en/about-us/about-roxtec/general-terms-of-sales/>

We reserve the right to make changes to the product and technical information without further notice. Any errors in print or entry are no claims for indemnity. The content of this publication is the property of Roxtec International AB and is protected by copyright.

This document was generated on: 2024-04-23