Roxtec

En savoir plus sur la solution sur roxtec.com
https://www.roxtec.com/linktransit/fr-ca/solution/32867

Passage Roxtec G Ex à souder

Passage certifié Ex avec bride, à souder à la structure.

Le Roxtec G Ex à souder est un passage pour une forte densité de câbles, conçu pour les zones classées Ex e et Ex tb, à des températures de -60 à +80 °C. Le cadre se fixe par soudage.

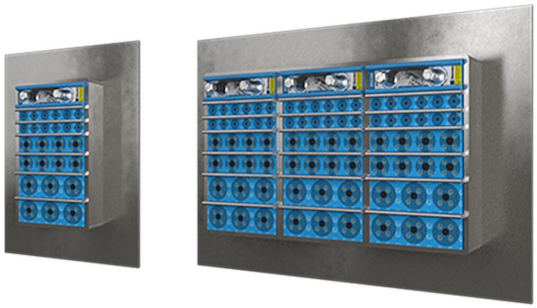

Caractéristiques du produit

IP/UL NEMA

Certifié Atex

Structure d'installation

Métal

Type de fixation

Soudage

Classements et certificats

Étanchéité

- IP 66/67

Supports

- Certifié Atex

Dimensions du cadre

mm/kg

Les variantes de cadre ci-dessous sont une sélection limitée. Pour voir la gamme complète de cadres et de configurations, veuillez visiter roxtec.com.

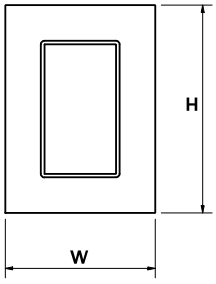

Titre	Ouvertures de cadre	Espace de remplissage	Dimensions externes WxHxD	Dimensions d'ouverture w x h	Poids	N° art.
G 6x1 W Ex PRIMED	1	120 x 180	252.5 x 350 x 60	201(+15/-15) x 298(+15/-15)	4.8	159116
G 6x2 W Ex PRIMED	2	120 x 180	383 x 350 x 60	331(+15/-15) x 298(+15/-15)	7.5	163091
G 6x3 W Ex PRIMED	3	120 x 180	513.5 x 350 x 60	462(+15/-15) x 298(+15/-15)	3	163092
G 6x1 W Ex AISI316	1	120 x 180	252.5 x 350 x 60	201(+15/-15) x 298(+15/-15)	4.8	125163
G 6x2 W Ex AISI316	2	120 x 180	383 x 350 x 60	331(+15/-15) x 298(+15/-15)	7.3	105258
G 6x3 W Ex AISI316	3	120 x 180	513.5 x 350 x 60	462(+15/-15) x 298(+15/-15)	9.9	109887

Eléments d'étanchéité

Eléments d'étanchéité

Lubrifiant Roxtec

Wedge et kit Wedge Ex

Module de compensation plein RM Ex

Module RM Ex avec Multidiameter™

Plaque de maintien Ex

Accessoires

Outils de soudage Roxtec

Kit d'étanchéité Ex

Pour plus d'informations, veuillez consulter roxtec.com.

The product information provided by Roxtec does not release the purchaser of the Roxtec system, or part thereof, from the obligation to independently determine the suitability of the products for the intended process, installation and/or use.
Roxtec gives no guarantee for the Roxtec system or any part thereof and assumes no liability for any loss or damage whatsoever, whether direct, indirect, consequential, loss of profit or otherwise, occurred or caused by the Roxtec systems or installations containing components not manufactured by an authorized manufacturer and/or occurred or caused by the use of the Roxtec system in a manner or for an application other than for which the Roxtec system was designed or intended.
Roxtec expressly excludes any implied warranties of merchantability and fitness for a particular purpose and all other express or implied representations and warranties provided by statute or common law. User determines suitability of the Roxtec system for intended use and assumes all risk and liability in connection therewith. In no event shall Roxtec be liable for indirect, consequential, punitive, special, exemplary or incidental damages or losses.
The Roxtec products are offered and sold in accordance with the conditions of the Roxtec General Terms of Sales. The latest version of the Roxtec General Terms of Sales can be downloaded from https://www.roxtec.com/en/about-us/about-roxtec/general-terms-of-sales/
We reserve the right to make changes to the product and technical information without further notice. Any errors in print or entry are no claims for indemnity. The content of this publication is the property of Roxtec International AB and is protected by copyright.
This document was generated on: 2024-04-27