

## General information

Installation and maintenance:

For European member countries of GENELEC, shall standard EN 60079-14 and EN 60079-17 be considered.

For countries members of IECEx shall standard IEC 60079-14 and IEC 60079-17 be considered.

For other countries shall applicable national regulation be considered.

The products fulfill the following standards:


EN 60079-0:2012, EN 60079-31:2009  
IEC 60079-0:2011, IEC 60079-31:2008



Installation instructions  
Cable transit device  
Roxtec CF 8 EMC Ex/  
CF 32 EMC Ex for  
Roxtec CM BG™ Ex and  
CM BG™ B Ex modules

The cable transit devices are intended for use with permanently installed circular cross-section cables, with or without armoring or braided screen. The cable entry may also be used with permanently installed cables of types TECK90 according to standard C22.2 No. 131-07, ACWU according to standard UL4, MC according to standard UL1569 and ACIC cables according to CSA C22.1-06 CEC UL444, UL1685, UL13, UL2250, IEC61158-2.

## Parts

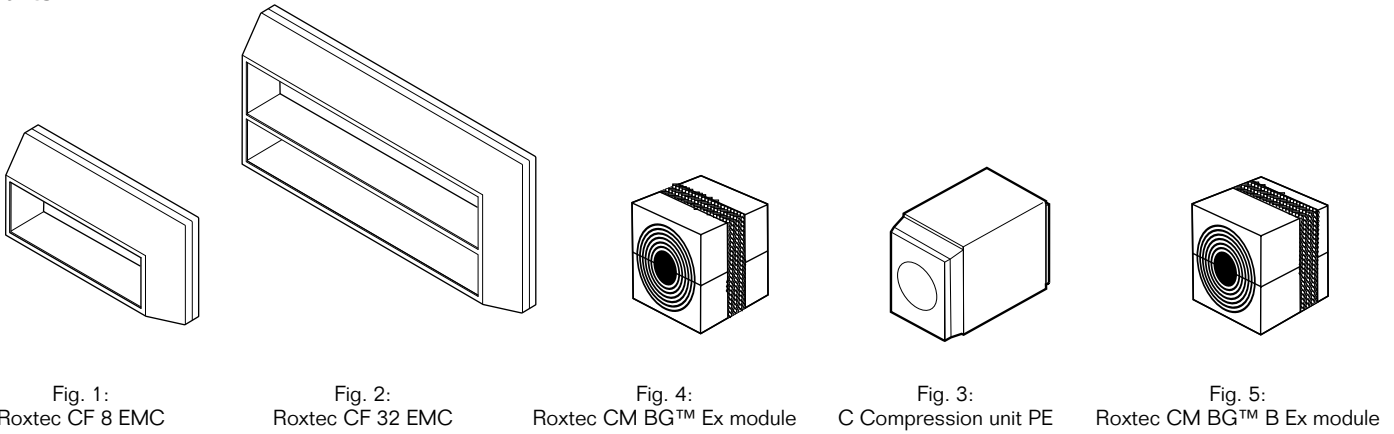

## Aperture dimensions, conductive area and max wall thickness


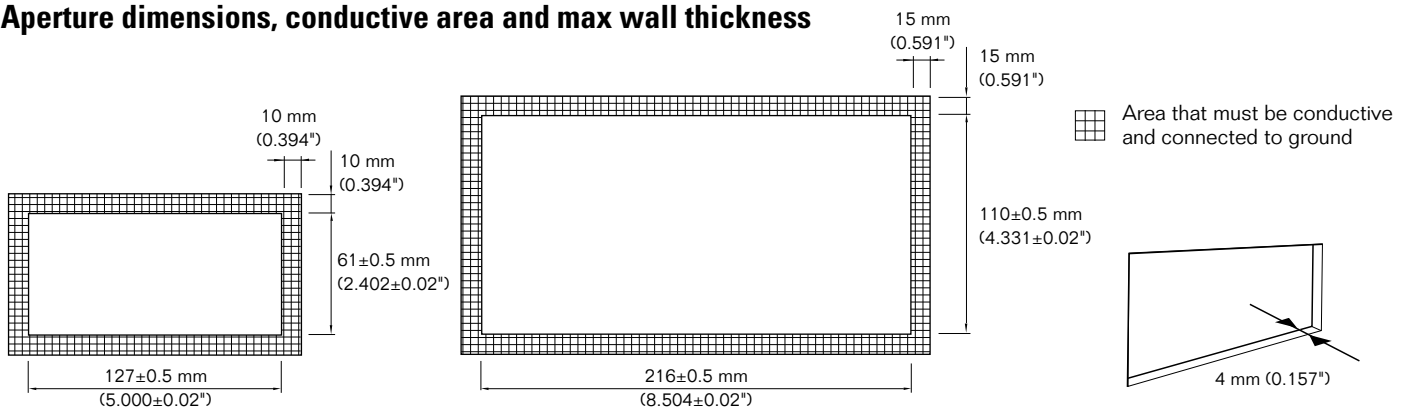


Fig. 6: CF 8 EMC aperture dimensions


Fig. 7: CF 32 EMC aperture dimensions

Fig. 8: Max wall thickness


# Installation

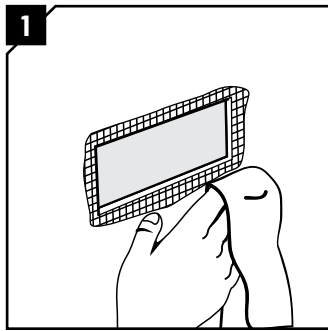


1 Ensure good electric conductivity between the counter frame and the structure. Clean the surface around the opening from inside the opening. Remove any paint if necessary.

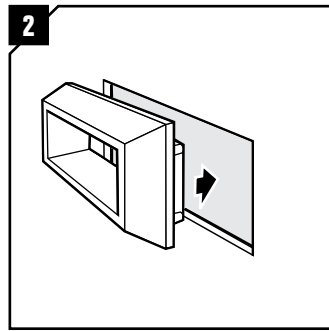


2 Insert the frame from the outside of the opening.

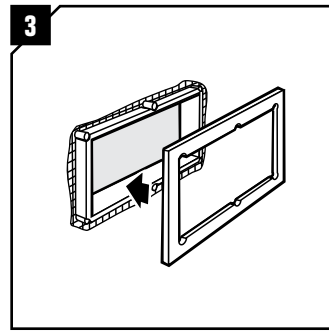


3 Insert the counter frame from the inside of the opening.

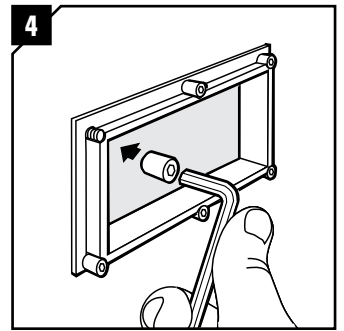


4 Fasten the frame by tightening the special nuts with an allen key.

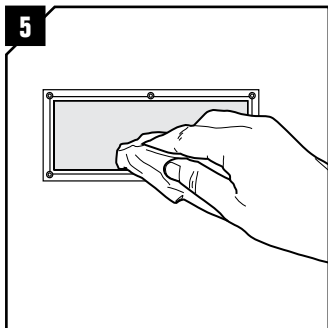


5 Clean the inside of the frame to ensure good conductivity.

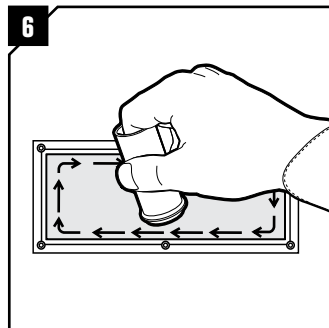


6 Lubricate the inside faces of the frame. Make sure to get lubricant into the corners. Avoid excess lubricant on areas in contact with the braid.

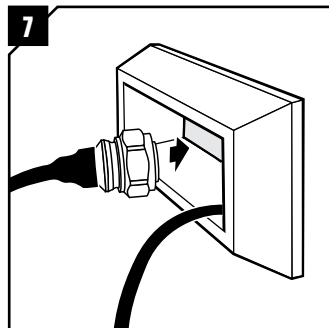


7 Insert all the cables.

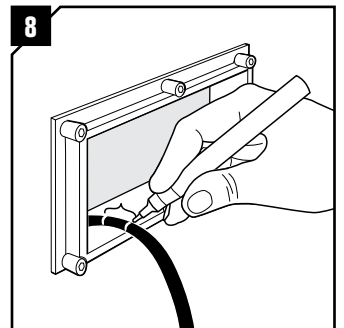


8 Mark where the outer jacket is to be removed to fit the braid position.

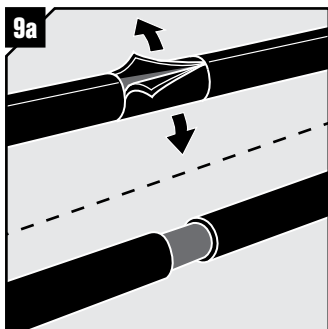

9a For BG™ Ex applications alternative 1. Remove enough outer jacket to ensure good conductivity with the braid of the module. Remove any protection tape or plastic if applicable.

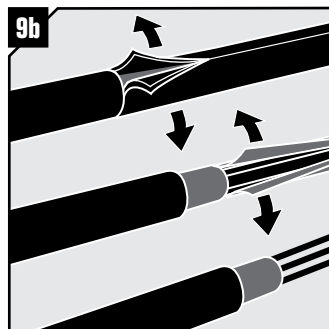



9b For BG™ Ex, alternative 2 and BG™ B Ex applications. Remove enough outer jacket to ensure good conductivity with the braid of the module. Remove any protection tape or plastic if applicable.

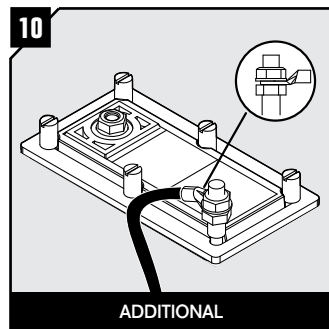

10 If applicable, install the ground connector and secure with the hexagonal nut. The ground connector is not included in Ex approvals for the cable transit device. Applicable requirements for the ground connector must be considered.


## Frame label:

Year of manufacture

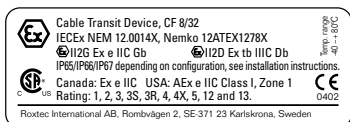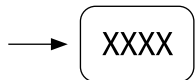

## UKCA conformity marking

Can only be applied together with the ATEX and IECEx main frame label.

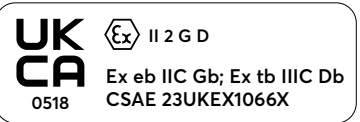



Please see page 3 on how to install the Roxtec CM BG™ Ex modules and page 4 for installation of the Roxtec CM BG™ B Ex modules

## Installation of Roxtec CM BG™ Ex module

Integrated environmental sealing system for bonding and grounding applications. For use with armored/shielded jacketed cables including smooth and corrugated cables such as interlocked and continuous welded metal clad cables or wired and braided cables.


In hazardous areas where the ATEX directive or IECEx scheme are applied, sealing modules of type Roxtec CM BG™ Ex are approved for use within cable transit devices of CF 8/32 EMC Ex.

### Cable position in a Roxtec CM BG™ Ex module

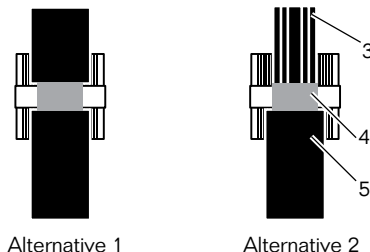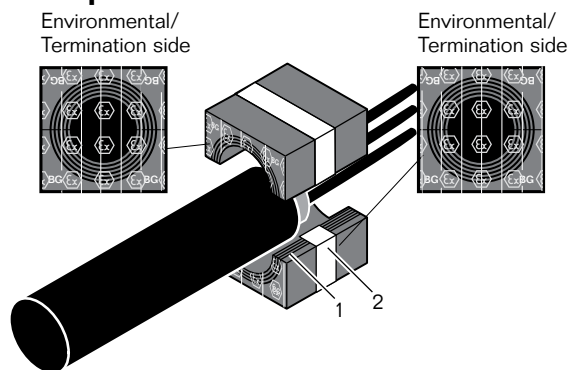


1. Multidiameter™ – adapts to cables and pipes of different sizes through removable layers
2. Bonding/grounding braid
3. Conductors
4. Cable armor/shield
5. Outer jacket


### Installation

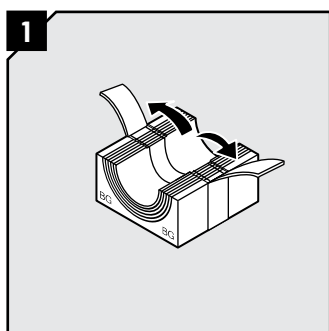


Remove the cores and gently fold back the braid on modules that are to hold cables or pipes.

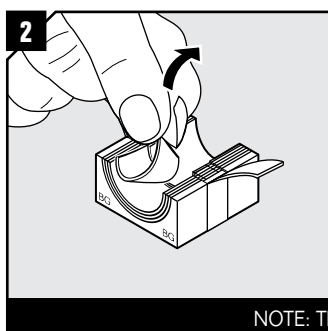


Adapt layers to fit outer jacket on both module halves.

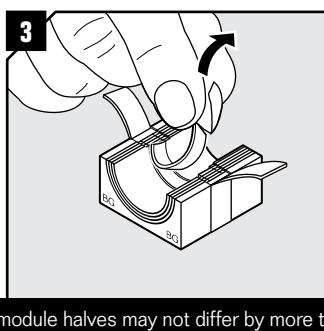


Adapt layers to fit cable screen/armor on both module halves.

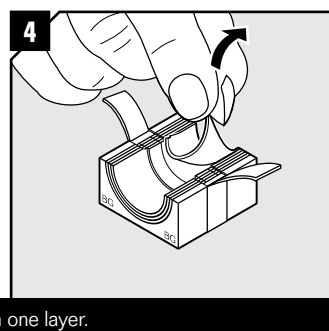


For alternative 1: Adapt inner layers to the cable/pipe outer diameter.  
For alternative 2: Adapt to inner conductors.

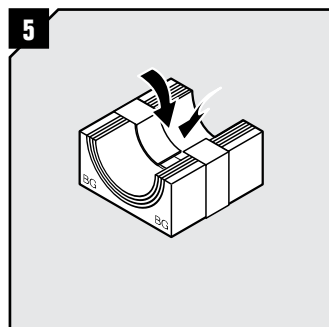


Fold the braid tightly inside the module.

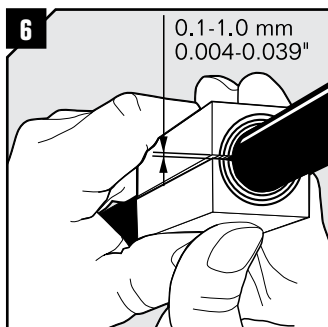


Achieve a 0.1-1.0 mm gap between the two halves when held against the cable or pipe.

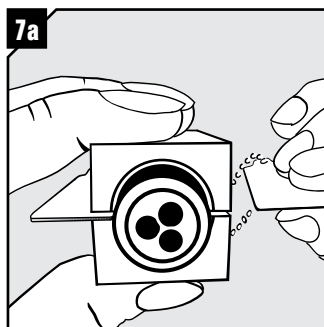


Measure the gap with the Ex Gap Gauge by holding blade one in one gap and checking the other with blade two.

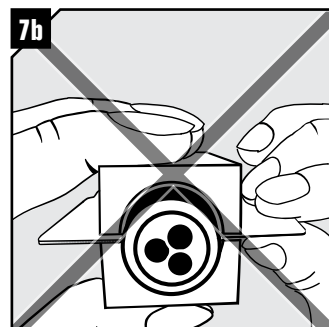

If the gap is too big, the gauge will slip in easily.

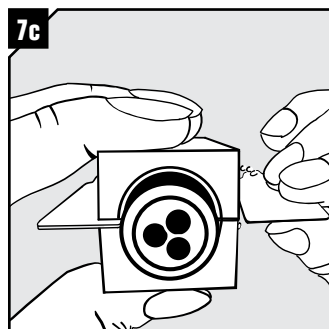

If the gap is correct, there will be no room for blade two.

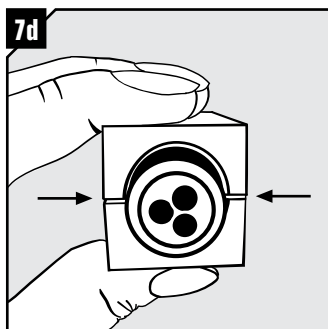

When checking without the gauge, there shall be a visual gap.



Please proceed to page 5 to complete the installation

## Installation of Roxtec CM BG™ B Ex module

Integrated environmental sealing system for bonding and grounding applications. For use with armored/shielded jacketed cables including smooth and corrugated cables such as interlocked and continuous welded metal clad cables or wired and braided cables.


In hazardous areas where the ATEX directive or IECEx scheme are applied, sealing modules of type Roxtec CM BG™ B Ex are approved for use within cable transit devices of CF 8/32 EMC Ex.

### Cable position in a Roxtec CM BG™ B Ex module

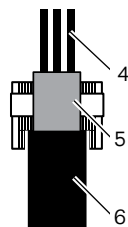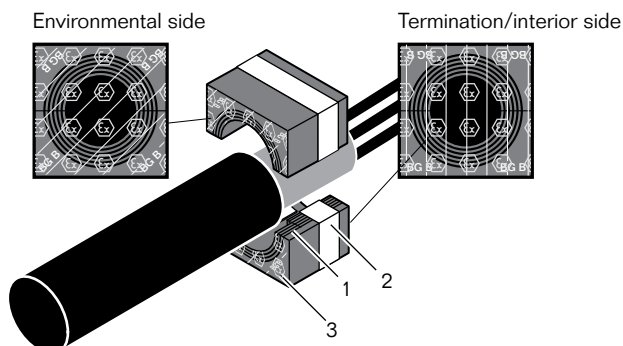


1. Multidiameter™ – adapts to cables and pipes of different sizes through removable layers
2. Bonding/grounding braid
3. Environmental side
4. Conductors
5. Cable armor/shield
6. Cable outer jacket


### Installation

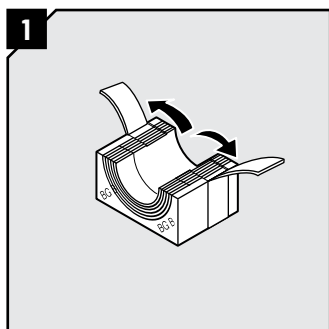


Remove the core and fold out the braid on modules that are to hold cables or pipes.

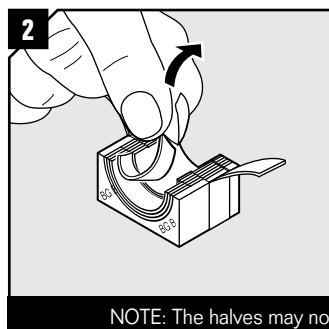


Adapt layers to fit outer jacket on both module halves.

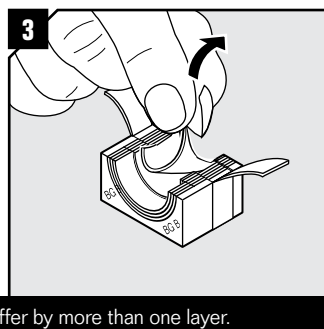


Adapt layers to fit cable screen/armor on both module halves.

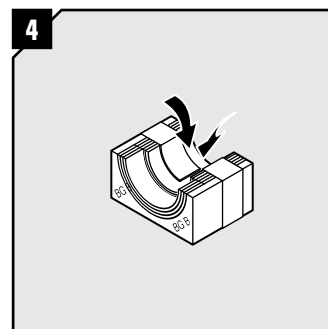


Fold the braid tightly inside the module.

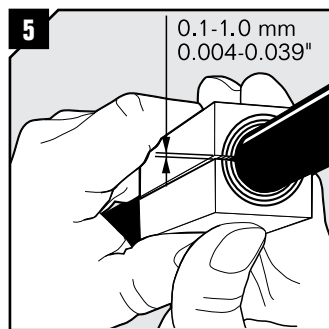


Achieve a 0.1-1.0 mm gap between the two halves when held against the cable or pipe.

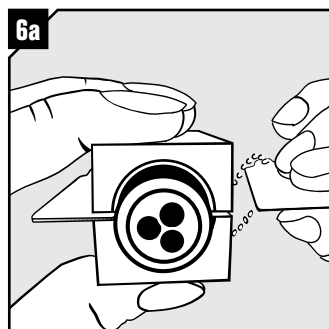


Measure the gap with the Ex Gap Gauge by holding blade one in one gap and checking the other with blade two.

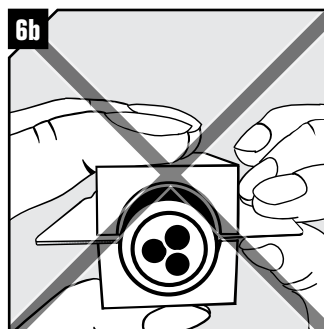

If the gap is too big, the gauge will slip in easily.

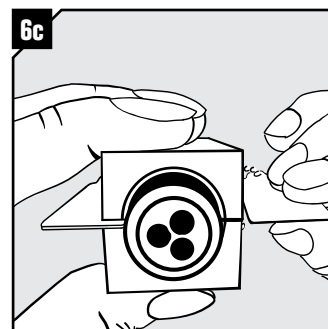


If the gap is correct, there will be no room for blade two.

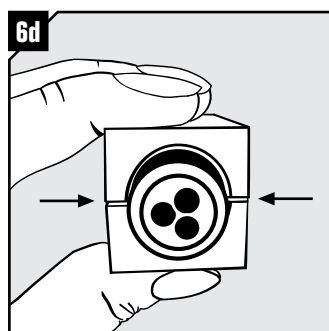


When checking without the gauge, there shall be a visual gap.

Please proceed to page 5 to complete the installation


## Installation continued

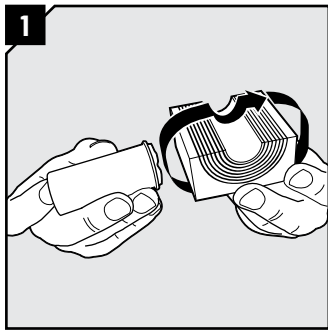


Lubricate the modules thoroughly with Rextec Lubricant, both the inside and outside faces. Avoid lubricant on the braid.

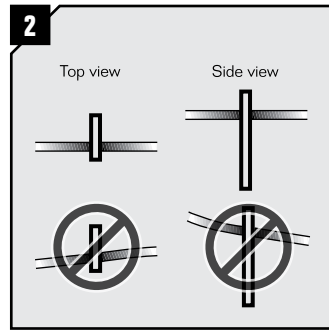


**Note** that cables shall go straight through the frame.

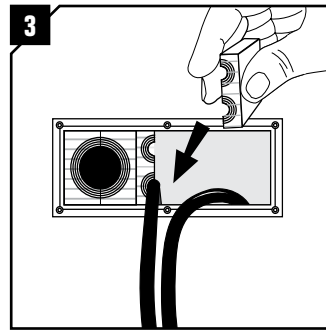


Insert the modules from the inside of the cabinet.

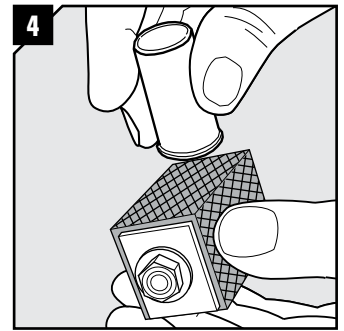

Lubricate the C Compression unit PE sparsely on all sides.

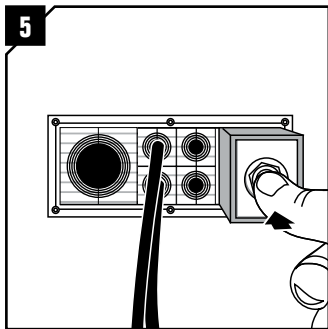

Gently insert the compression unit.

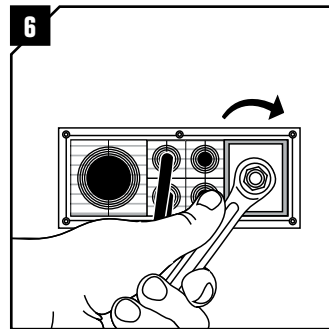

Tighten the compression unit to seal the frame. Recommended torque 8-12 Nm.

## Disassembly

Reverse order

## Adaptable Rextec CM BG™ Ex modules/sizing chart

Module	For cable/pipe diameter		Total braid cross-section sq mm	Approx. eqv. AWG	Number of cables/pipes
	a-b (mm)	a-b (in)			
CM 15w40 BG Ex	0+3.5-10.5	0+0.138-0.413	3*	12*	3
CM 20 BG Ex	0+4.0-14.5	0+0.157-0.571	8	8	1
CM 20w40 BG Ex	0+3.5-16.5	0+0.138-0.650	4*	11*	2
CM 30w40 BG Ex	0+10.0-25.0	0+0.394-0.984	13	6	1
CM 40 BG Ex	0+21.5-34.5	0+0.846-1.358	21	4	1
CM 40 10-32 BG Ex	0+9.5-32.5	0+0.374-1.280	21	4	1

\* Per cable.

## Solid compensation Rextec CM BG™ Ex modules

Module	Total braid cross-section sq mm	Approx. eqv. AWG	Number of cables/pipes
CM 5w40/0 BG Ex	8	8	-
CM 10w40/0 BG Ex	8	8	-
CM 20/0 BG Ex	8	8	-
CM 40/0 BG Ex	21	4	-

## Adaptable Roxtec CM BG™ B Ex modules/sizing chart

Module	For cable/pipe diameter		Approx. total braid cross-section sq mm	Approx. eqv. AWG	Number of cables/pipes
	a-b (mm)	a-b (in)			
CM 15w40 BG B Ex	0+3.5-10.5	0+0.138-0.413	3*	12*	3
CM 20 BG B Ex	0+4-14.5	0+0.157-0.571	8	8	1
CM 20w40 BG B Ex	0+3.5-16.5	0+0.138-0.650	4*	11*	2
CM 30w40 BG B Ex	0+10.0-25.0	0+0.394-0.984	13	6	1
CM 40 BG B Ex	0+21.5-34.5	0+0.846-1.358	21	4	1
CM 40 10-32 BG B Ex	0+9.5-32.5	0+0.374-1.280	21	4	1

\* Per cable.

## Solid compensation Roxtec CM BG™ B Ex modules

Module	Approx. total braid cross-section sq mm	Approx. eqv. AWG	Number of cables/pipes
CM 5w40/0 BG B Ex	8	8	-
CM 10w40/0 BG B Ex	8	8	-
CM 20/0 BG B Ex	8	8	-
CM 40/0 BG B Ex	21	4	-

## The ingress protection of the cable transit device varies depending on configuration according to the table below

Configuration	IP-class
Corrugated cable	IP 65
Circular cross-section, smooth shape	IP 66

## Note

- An incorrectly adapted seal shall be replaced (layers shall not be reused).
- Temperature range -40 to +80°C.
- Permitted Roxtec modules: CM BG™ Ex and CM BG™ B Ex type.
- You find EC Type examination certificate at [www.roxtec.com](http://www.roxtec.com), or contact your local Roxtec supplier.

The following conditions for safe use shall be considered according to the ATEX EC Type Examination certificate and the IECEx Certificate of Conformity:

- 1 For maintaining the explosion protection, the installation instructions that accompany the products shall be considered.
- 2 Only cable for fixed installation is permitted for the cable entry.
- 3 For optimum reliability wait 24 hours or longer after installation before exposing the cables/pipes to strain or pressure.



## DISCLAIMER

"The Roxtec cable entry sealing system ("the Roxtec system") is a modular-based system of sealing products consisting of different components. Each and every one of the components is necessary for the best performance of the Roxtec system. The Roxtec system has been certified to resist a number of different hazards. Any such certification, and the ability of the Roxtec system to resist such hazards, is dependent on all components that are installed as a part of the Roxtec system. Thus, the certification is not valid and does not apply unless all components installed as part of the Roxtec system are manufactured by or under license from Roxtec ("authorized manufacturer"). Roxtec gives no performance guarantee with respect to the Roxtec system, unless (I) all components installed as part of the Roxtec system are manufactured by an authorized manufacturer and (II) the purchaser is in compliance with (a), and (b), below.

(a) During storage, the Roxtec system or part thereof, shall be kept indoors in its original packaging at room temperature.

(b) Installation shall be carried out in accordance with Roxtec installation instructions in effect from time to time.

The product information provided by Roxtec does not release the purchaser of the

Roxtec system, or part thereof, from the obligation to independently determine the suitability of the products for the intended process, installation and/or use. Roxtec gives no guarantee for the Roxtec system or any part thereof and assumes no liability for any loss or damage whatsoever, whether direct, indirect, consequential, loss of profit or otherwise, occurred or caused by the Roxtec systems or installations containing components not manufactured by an authorized manufacturer and/or occurred or caused by the use of the Roxtec system in a manner or for an application other than for which the Roxtec system was designed or intended.

Roxtec expressly excludes any implied warranties of merchantability and fitness for a particular purpose and all other express or implied representations and warranties provided by statute or common law. User determines suitability of the Roxtec system for intended use and assumes all risk and liability in connection therewith. In no event shall Roxtec be liable for indirect, consequential, punitive, special, exemplary or incidental damages or losses."



Roxtec International AB  
Box 540, 371 23 Karlskrona, SWEDEN  
PHONE +46 455 36 67 00, FAX +46 455 820 12  
EMAIL [info@roxtec.com](mailto:info@roxtec.com), [www.roxtec.com](http://www.roxtec.com)